

## Isoclear Mounting Instruction v1.1



Type: Isoclear

Date: 22-03-2021

Version: 1.1

LoadLok® International B.V.

Oudewei 4

4004 LS TIEL

Nederland

T +31 (0)344-670 960

F +31 (0)344-722 960

## Document history

Version	Status	Date	Author	Remarks
0.1	Concept	13 Jan 2017		
0.5	Review	08 Mar 2017		
0.6	Review	June 2017		
1.0	Final	04 July 2017	Eelco Noort	
1.1	Update	22 March 2021	Natascha Nijhuis	

Copyright © 2021 by Loadlok International

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission or the publisher, except in the case of brief quotations embodied in critical reviews and certain other non-commercial uses permitted by copyright law.

## Contents

1	Introduction .....	4
1.1	Preface .....	4
1.2	Common information .....	4
1.3	Notes to the operator .....	5
1.4	Reading instructions .....	5
1.5	List with abbreviations.....	6
2	Safety .....	7
2.1	Signs in the manual .....	7
3	Mounting the Frigowall track.....	8
3.1	Parts needed .....	8
3.1.1	Mandatory parts (all variants) .....	8
3.1.2	Mandatory parts Slide and Slide Shift variants.....	9
3.1.3	Mandatory part Fix and Fix-Shift variants .....	11
3.1.4	Optional parts.....	12
3.1.5	Consumables .....	13
3.1.6	Parts to be supplied by yourself.....	14
3.2	Tools needed .....	15
4	Mounting the track (Slide and Slide-Shift only) .....	16
5	Mounting the track (Fix and Fix-Shift only) .....	21
6	Installation of the ISOCLEAR assembly in the vehicle .....	22
7	Check of the functionality.....	35
7.1	Check the break functionality.....	35
8	Maintenance .....	37
9	Document information.....	38

## 1 INTRODUCTION

### 1.1 PREFACE

This operating manual is an essential aid for the correct and safe use of the insulation partition walls.

This manual contains important information for reliable, proper and efficient use of the insulating partitions. Adherence to the manual helps to avoid dangers, reduce repair costs and downtime and increase the reliability and the lifetime of insulating walls.

The instructions must be available to the operating personnel at all times. Any person who is authorized to use the insulating walls reads the operating instructions before use and then applies them accordingly.

### 1.2 COMMON INFORMATION

Do not expose Isoclear to outside weather conditions, extreme temperatures and direct sunlight.

Any change to the product makes the CE marking invalid. Please contact the manufacturer if a modification of the product is necessary.

Loadlok reserves the right, if not being met to the requirements, to withdraw the guarantee of their product partially or entirely.

At the end of the lifecycle:

The end user can deliver the multi temp product to Loadlok. Loadlok provides environmentally sound disposal of their product and recycles parts if these are fit for reuse.

### 1.3 NOTES TO THE OPERATOR

This manual is an essential part of the insulating walls. The customer shall ensure that the operator adheres these instructions. Please check our website [www.loadlok.com](http://www.loadlok.com) for additional information such as user manuals. Or scan the QR code to find us on YouTube:



Note that in addition to the instructions, the laws of the country of the place of use are applicable and approved rules for accident prevention alongside with approved technical regulations for safe and professional work shall apply.

Any change to the product makes the CE marking invalid. Please contact the manufacturer if a modification of the product is necessary.

The Isoclear is not a load securing device!

## 1.4 READING INSTRUCTIONS



WARNING:



This is a warning of a potentially hazardous situation, resulting in moderate or minor injury and / or property damage if the appropriate instruction is not followed exactly.



ATTENTION:

This is a reference to useful information for the safe and effective use.

Orientation

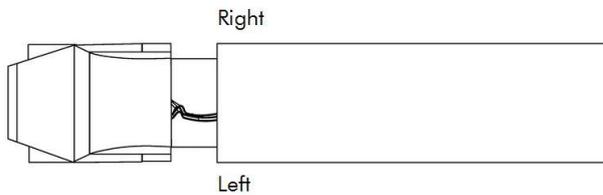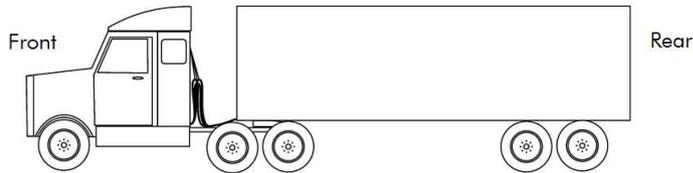

## 1.5 LIST WITH ABBREVIATIONS

Frigowall track     J-formed rail with locking holes to guide the Isoclear into the trailer.  
(Type 3062)

## 2 SAFETY

### 2.1 SIGNS IN THE MANUAL



WARNING:

This is a warning of a risk of danger, with the possible consequence serious injury or death if the designated instruction is not exactly is followed.



WARNING:

This is a warning of a potentially hazardous situation, resulting in moderate or minor injury and / or property damage if the appropriate instruction is not followed exactly.



ATTENTION:

This is a reference to useful information for the safe and effective use.


### 3 MOUNTING THE FRIGOWALL TRACK

#### 3.1 PARTS NEEDED

##### 3.1.1 Mandatory parts (all variants)

Material	Measurements	Article number / Description
<p>Isoclear Sheet</p>  <p>Notes:</p>		<p>11060166</p> <p>Isoclear Sheet</p>
<p>Isoclear spring clamp</p>  <p>Notes: To be fitted on both ends of the round tube (SLIDE versions).</p>		<p>12009529</p> <p>Leaf spring 10x1 C75 for Isoclear</p>

3.1.2 Mandatory parts Slide and Slide Shift variants

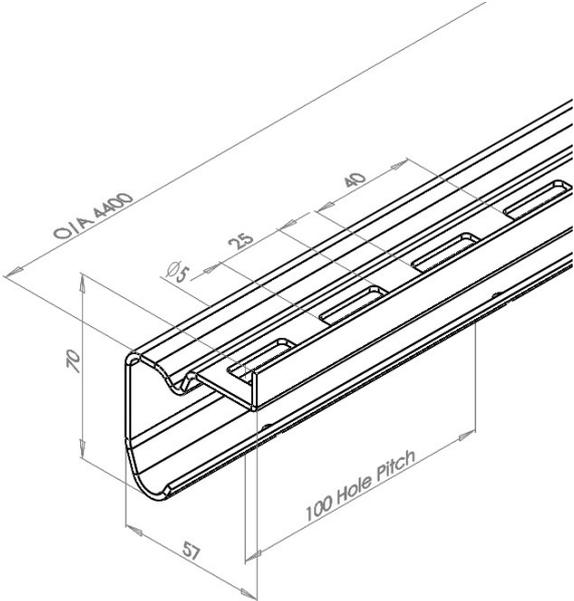Material	Measurements	Article number / Description												
<p>Frigowall-track</p> 		<p>10011288 3062 SS304 3200 Frigowall Track</p> <p>Alternative article numbers with descriptions:</p> <table border="0"> <tr> <td>10011291</td> <td>10009470</td> </tr> <tr> <td>3062 PRE GALV 4400 Frigowall Track</td> <td>3062 SS304 3200 CS Frigowall Track</td> </tr> <tr> <td>10011289</td> <td>10011290</td> </tr> <tr> <td>3062 SS304 4400 Frigowall Track</td> <td>3062 SS430 3200 Frigowall Track</td> </tr> <tr> <td></td> <td>10010708</td> </tr> <tr> <td></td> <td>3061 PG 3200 Frigowall Track</td> </tr> </table> <p>Notes:</p>	10011291	10009470	3062 PRE GALV 4400 Frigowall Track	3062 SS304 3200 CS Frigowall Track	10011289	10011290	3062 SS304 4400 Frigowall Track	3062 SS430 3200 Frigowall Track		10010708		3061 PG 3200 Frigowall Track
10011291	10009470													
3062 PRE GALV 4400 Frigowall Track	3062 SS304 3200 CS Frigowall Track													
10011289	10011290													
3062 SS304 4400 Frigowall Track	3062 SS430 3200 Frigowall Track													
	10010708													
	3061 PG 3200 Frigowall Track													
<p>Rubber end stop</p> 		<p>11060164 Rubber endstop extra hole</p>												

Material	Measurements	Article number / Description
Notes: To be fitted on all ends. Is not accompanied with fasteners.		
Trolley for Isoclear 2D 		11060160  Isoclear trolley set Stainless Steel
Notes:  Trolley for Isoclear 3D 		12011466 Trolley Left Isoclear 3D RVS  12011467 Trolley Right Isoclear 3D RVS
Fixed length round tube 		12009533  Telescopic tube for Isoclear
Notes:		

3.1.3 Mandatory part Fix and Fix-Shift variants

Material	Measurements	Article number / Description
<p>Isoclear fix bracket</p>  <p>Notes: Is not accompanied with fasteners. This article is used if Isoclear is to be used at a side door of the trailer.</p>		<p>12009531 Ceiling track bracket</p>
<p>Isoclear fix track</p>  <p>Notes: Is not accompanied with fasteners.</p>		<p>11060165 1805 track L=5 holes for Isoclear Fix</p>
<p>Telescopic round tube</p>  <p>Notes:</p>		<p>12009533 Telescopic tube for Isoclear Fix</p>



3.1.4 Optional parts

Material	Measurements	Article number / Description
<p>Steel stopper right side</p>  <p>Notes: Is delivered without fasteners</p>		<p>14003348</p> <p>Steel stopper rightside for Bulkheads</p>
<p>Steel stopper left side</p>  <p>Notes: Is delivered without fasteners</p>		<p>14003346</p> <p>Steel stopper leftside for Bulkheads</p>
<p>Steel stopper right side</p>  <p>Notes: Is delivered without fasteners</p>		<p>14003349</p> <p>Steel stopper rightside for Bulkheads</p>
<p>Steel stopper left side</p>  <p>Notes: Is delivered without fasteners</p>		<p>14003347</p> <p>Steel stopper leftside for Bulkheads</p>

3.1.5 Consumables

Material	Measurements	Article number / Description
Isoclear Sheet  Notes:		11060166 Isoclear Sheet

3.1.6 Parts to be supplied by yourself

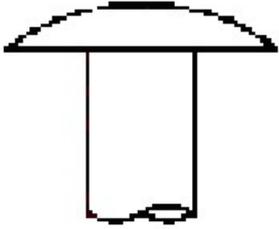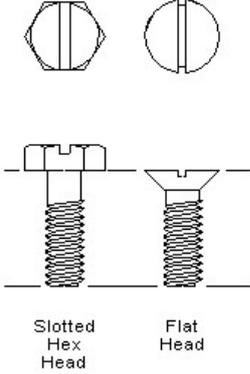Material	Measurements	Article number / Description
<p>Rivets</p>  <p>Notes: The length of the rivet is subject to the composition of the insulation wall of the trailer.</p> <p>This article is not in the delivery program of LoadLok.</p>	<p>5 mm or 8 mm diameter</p>	<p>N.A.</p>
<p>Screw bolt</p>  <p>Notes: The length of the screw is subject to the composition of the insulation wall of the trailer.</p> <p>Flathead optional: holes counter sunk for flush mounting. If this is a preference for mounting the Frigowall track, the mounting holes can be made counter sunk.</p> <p>This article is not in the delivery program of LoadLok.</p>	<p>5 mm or 8mm diameter</p>	<p>N.A.</p>

**3.2 TOOLS NEEDED**

Blind rivet pliers



Wrench



Spirit level tool



Measuring tape



Pipe wrench




## 4 MOUNTING THE TRACK (SLIDE AND SLIDE-SHIFT ONLY)




ATTENTION:

The procedure as described here must be performed twice, once on the left-hand side and once on the right hand side of the trailer.

1. Measure the effective length of track to be used.

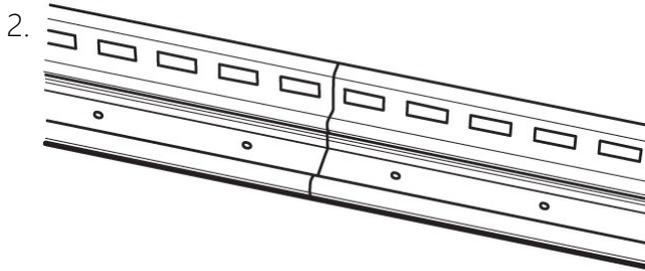

For smooth running of the balancer trolley wheels over several tracks LoadLok advises to weld the tracks in the joining point in such way the balancer or trolley wheels never can interfere with the weld.

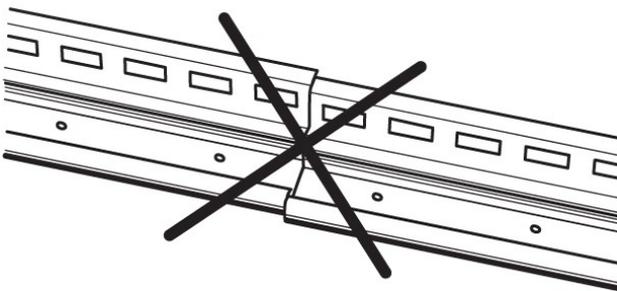

Make sure that the end edges of the rails are straight, so that the wheels of the vehicle can run continuous smoothly.


3. If the Frigowall-track is to be shortened, please leave enough material length in order to fasten the rubber end-stop with its steel cover plate.



ATTENTION:

Loadlok advises to use adhesive between the Frigowall track and side walls which is fit for this purpose.


4.

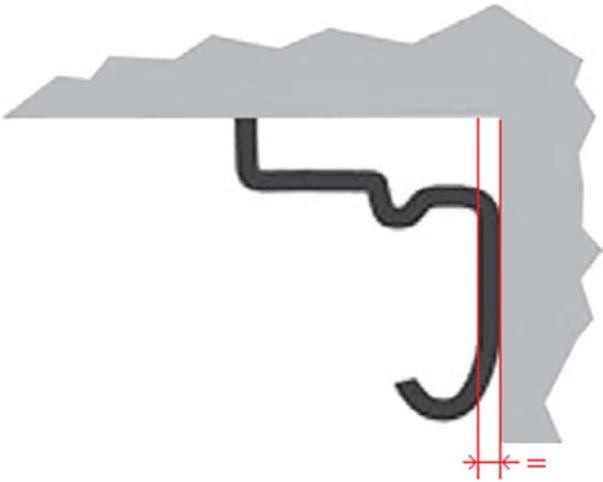

Insert the guide rails in the outer left or right side of your vehicle.

Install the rails vertical (both to the wall and also to the ceiling).

5.

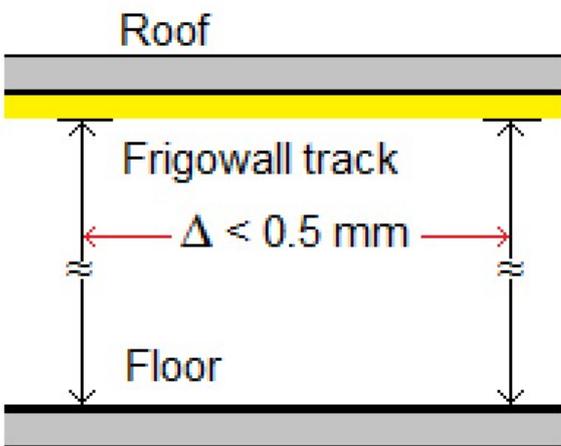


Side view

Measure the distance from the floor to the Frigowall track on both ends of the track.

The difference must be less than 0.5 mm as is shown in the illustration.


6.

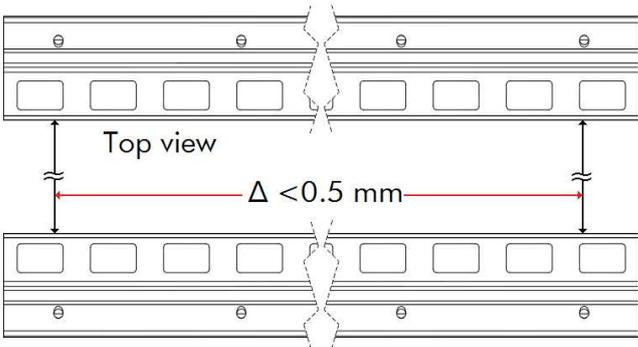

Measure the distance between the tracks in the vehicle, like is shown in the illustration.

The difference must be less than 0,5 mm.

7.

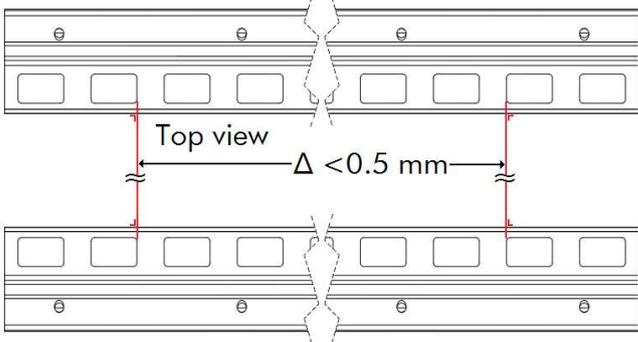

The locking holes **must** be parallel.

The difference must be less than 0,5 mm.



ATTENTION:

Maintain the Frigowall-track on level!  
The tolerance for smooth running is < 0,5 mm!

8. Use **all** mounting holes with a rivet or a screw.



ATTENTION:

When using rivets:  
Please fasten the Frigowall track to a minimum length of 750 mm with bolts for maintenance purposes of the Isoclear door. These sections must be opposite to each other!



ATTENTION:

Wait until the adhesive is fully hardened. Only then proceed with rolling the Isoclear assembly into the track.



ATTENTION:

Note that the locking holes must remain free of obstacles


9. Mount the end stops at the bulkhead side of the track. (As is shown on position 10 or 11)

10





Mount / attach the end stop.

Possibilities are to use a M5 x 30 bolt and use the drain hole, a M8 bolt with thread or a big screw. Choose the option that suits your needs best. Mounting materials are not included.

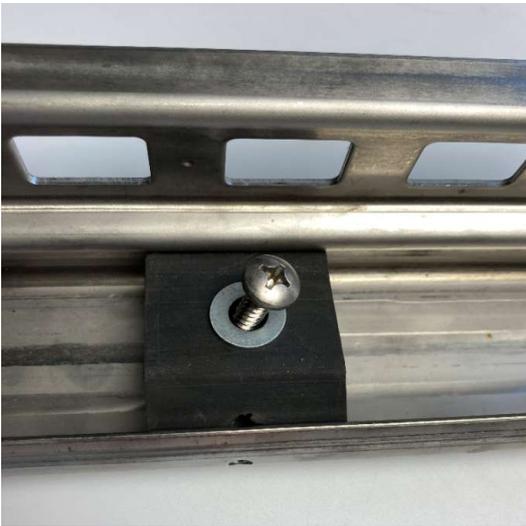

11. Optional mounting of the steel stopper as shown in the figure. The hole in the Frigowall track must be drilled.  
In total 3 holes must be drilled!

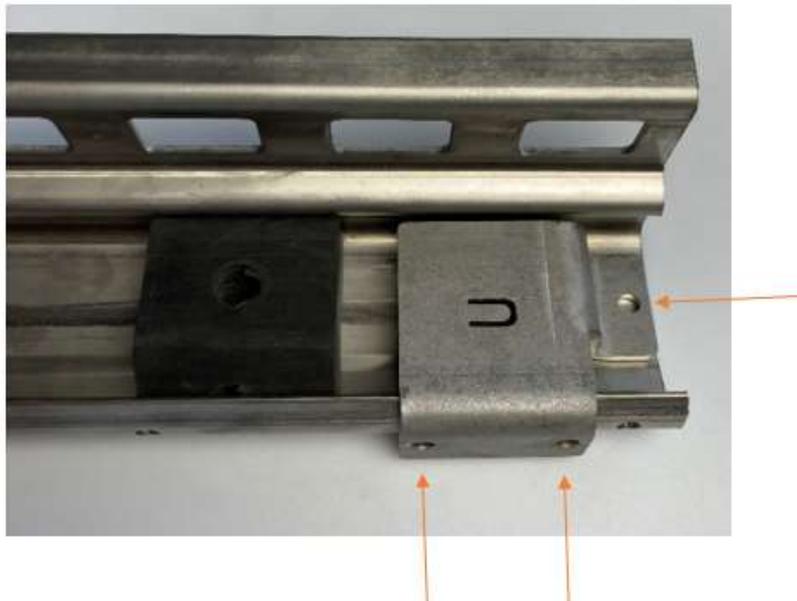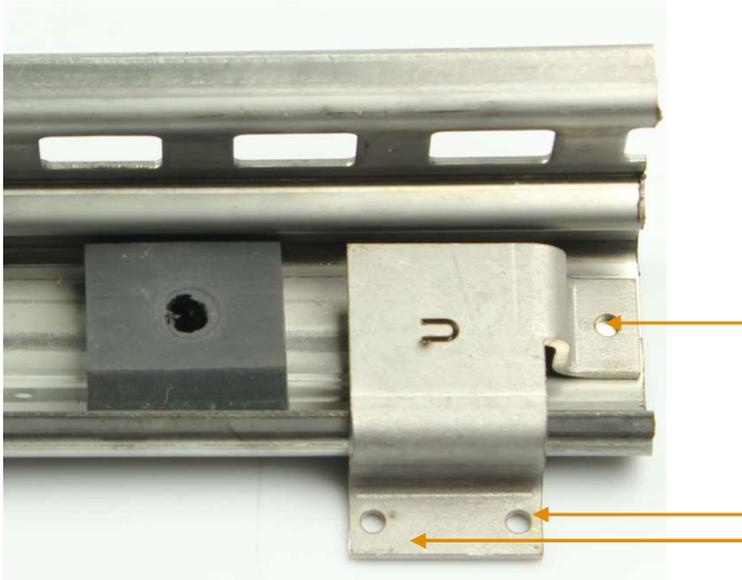

## 5 MOUNTING THE TRACK (FIX AND FIX-SHIFT ONLY)



ATTENTION:

The procedure as described here must be performed twice, once on the left-hand side and once on the right hand side of the trailer.


1.



Insert the guide rails in the outer left or right side of your vehicle.

Install the rails vertical (both to the wall and also to the ceiling).

2.

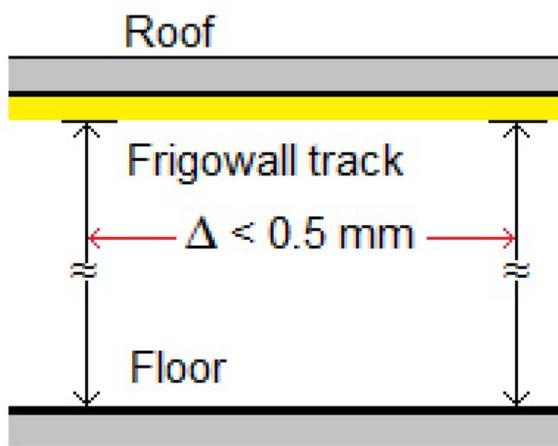

Measure the distance from the floor to the Frigowall track on both ends of the track.

The difference must be less than 0.5 mm as is shown in the illustration.

Side view

3. Use **all** mounting holes with a rivet or a screw.



ATTENTION:

Loadlok advises to use adhesive between the Frigowall track and side walls which is fit for this purpose.



ATTENTION:

Wait until the adhesive is fully hardened. Only then proceed to roll the Isoclear assembly into the track.


## 6 INSTALLATION OF THE ISOCLEAR ASSEMBLY IN THE VEHICLE

### 6.1 FIX VARIANT




WARNING:

Ensure that the vehicle is positioned on a horizontal plane before continuing with the installation!

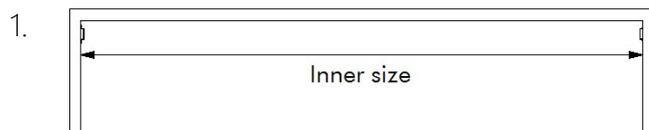


Measure the inner size of the trailer.

2. Length of tube = inner width of trailer – 30 mm

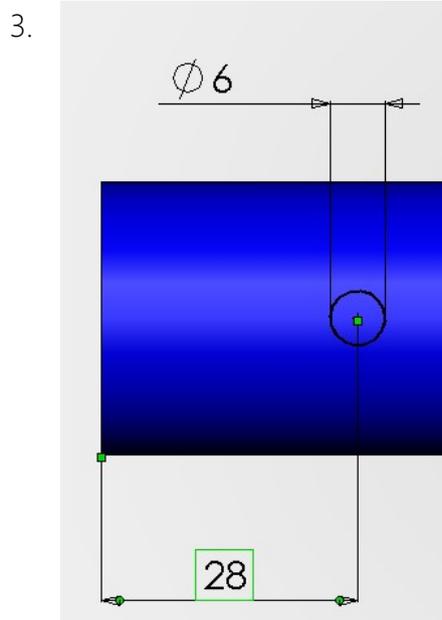


Drill a hole of 6mm at 28 mm from the end.

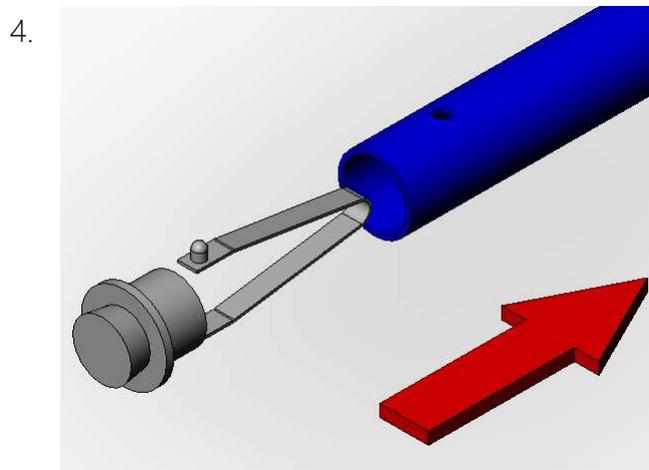

Mount the end cap on the tube as shown in the figure.

5.

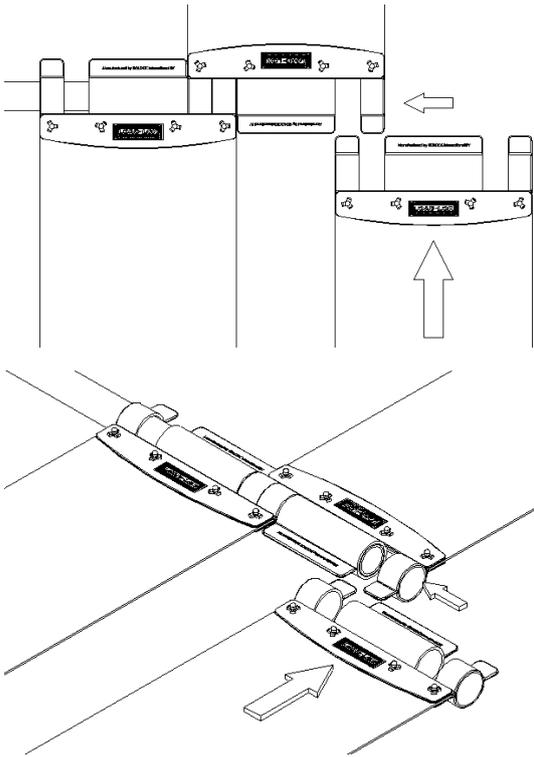

Mount all strips as shown in the figures.

	<p><b>ATTENTION:</b> Keep the loadLok / ISOLOCK logo on one side!</p>
--	---

- 6. The tube with the Isoclear sheets on it must be placed for the (side) door you want to close tith the Isoclear.
- 7. Then slide the brackets on the tube in such way the Isoclear cannot shift sideways anymore.
- 8. Mount the brackets to the side wall.





ATTENTION:

To disassemble, follow these steps in reversed order


## 6.2 FIX-SHIFT VARIANT



WARNING:

Ensure that the vehicle is positioned on a horizontal plane before continuing with the installation!


1.

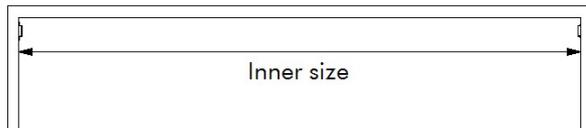

Measure the inner size of the trailer.


2. Length of tube = inner width of trailer – 30 mm

3.

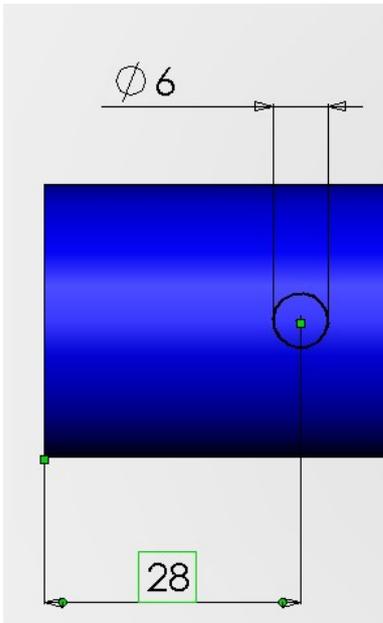

Drill a hole of 6mm at 28 mm from the end.


4.

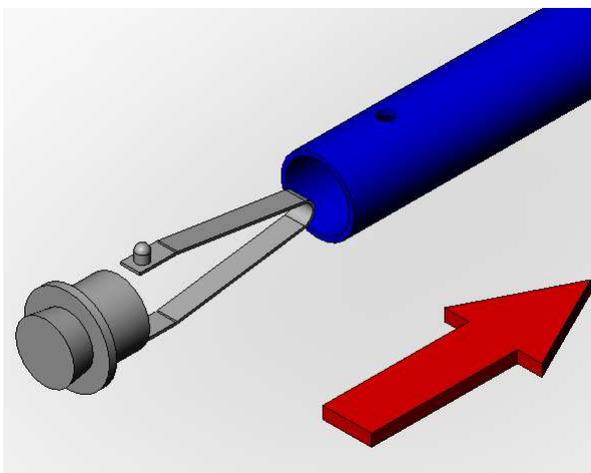

Mount the end cap on the tube as shown in the figure.

5. Slide the strip with the operating belt onto the tube.

6.

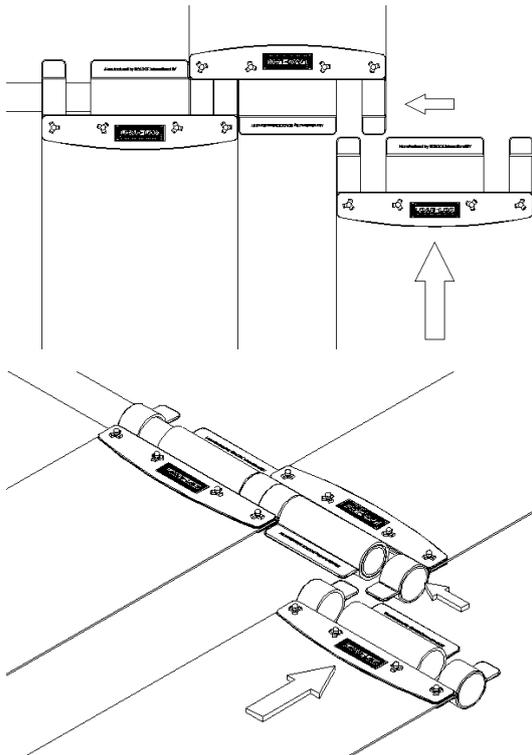

Mount all strips as shown in the figures.



ATTENTION:

Keep the LoadLok / ISOLOCK logo on one side!

7. Slide the strip with the operating belt onto the tube.

8. Repeat above steps 3 till 7 for the other tube.

9. Mount the tube in the tube-profile

10.




The tubes **MUST** be mounted diametrically opposed as is shown in the figure.

### 6.3 SLIDE VARIANT




 WARNING:

Ensure that the vehicle is positioned on a horizontal plane before continuing with the installation!



2. Length of tube = inner width of trailer – 70 mm

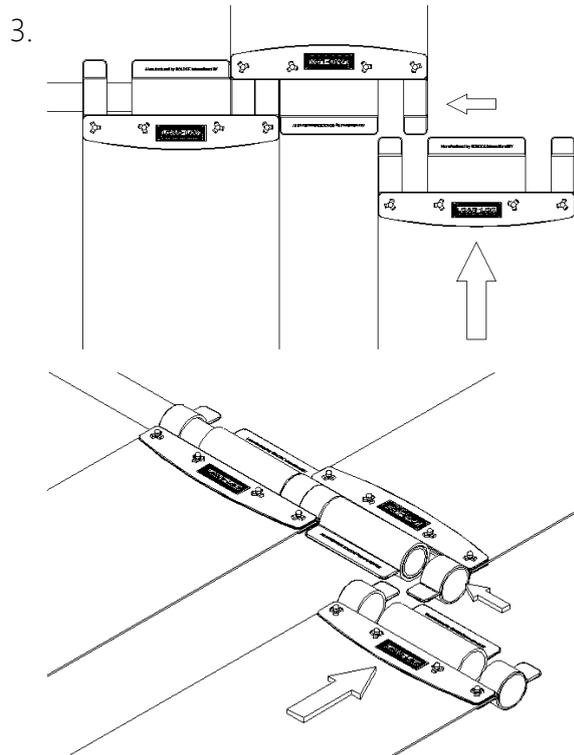

ATTENTION:

Keep the LoadLok / ISOLOCK logo on one side!

4. Mount the tube in the tube-profile
5. Carefully lift the ISO Clear assembly against the opening of the mounted guide rails and insert the wheels of the trolleys into the rail.
6. Slide the ISOCLEAR assembly as far into the vehicle as possible so that the assembly cannot roll out of the **unsecured** rails.
7. Override the brake by pulling the break-cord on both sides.

8. Push the ISOCLEAR assembly at least so far in the trailer that the locking finger on each side is in a breakhole.



**WARNING:**

Severe injuries are possible due to a falling assembly.  
Assure that the locking finger is in a break hole!



**ATTENTION:**

The wheels are freely movable sideways up to 10mm to compensate for differences in vehicle width.



9. Mount the end stops at the bulkhead side of the track. (As is shown on position 10 or 11)

10





Mount / attach the end stop.

Possibilities are to use a M5 x 30 bolt and use the drain hole, a M8 bolt with thread or a big screw. Choose the option that suits your needs best. Mounting materials are not included.

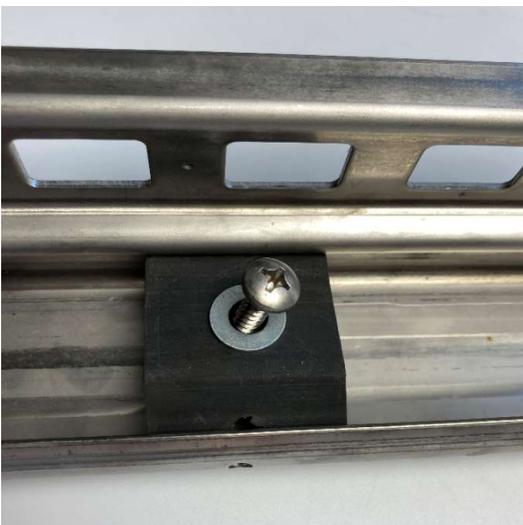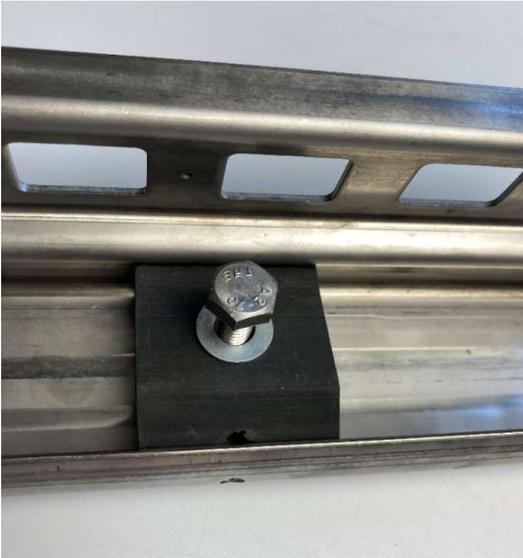

11. Optional mounting of the steel stopper as shown in the figure. The hole in the Frigowall track must be drilled.

In total 3 holes must be drilled!

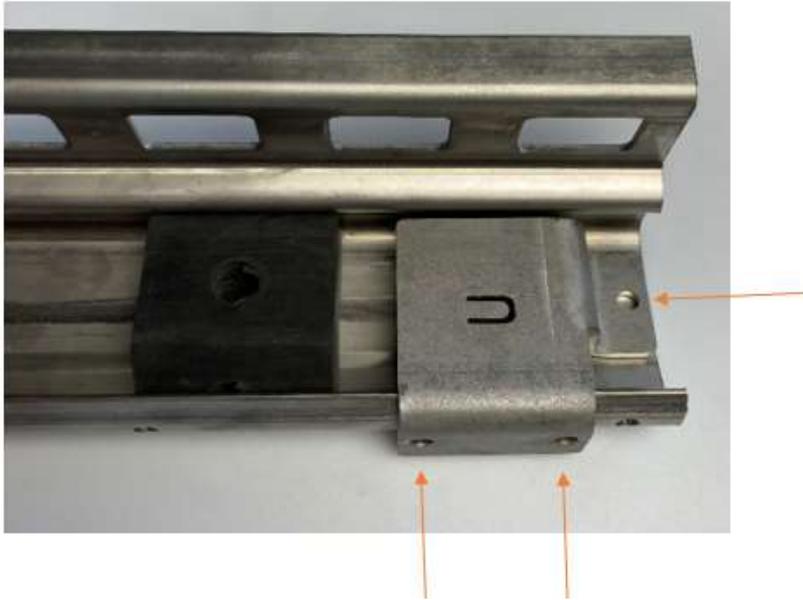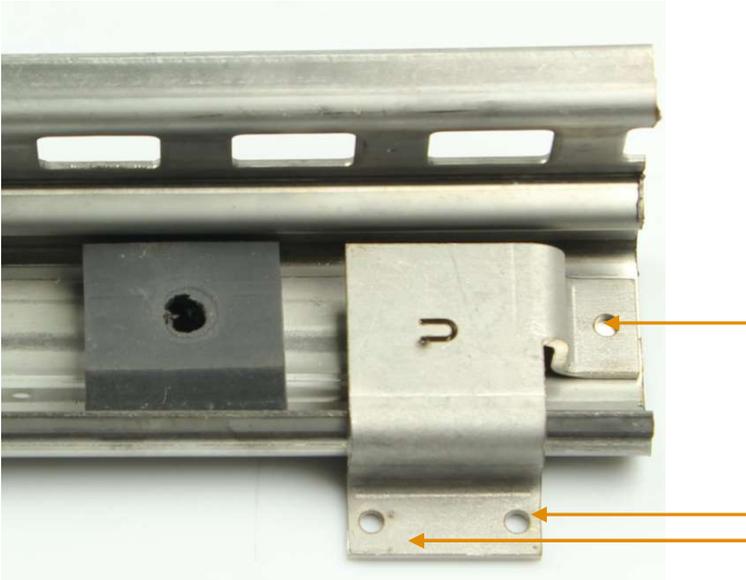

12.




ATTENTION:  
Perform step 9 also for the other side of the trailer!

## 6.4 SLIDE-SHIFT VARIANT



 WARNING:


Ensure that the vehicle is positioned on a horizontal plane before continuing with the installation!




Measure the inner size of the trailer.

2. Length of tube = inner width of trailer – 70 mm

3. Slide the strip with the operating belt onto the tube.

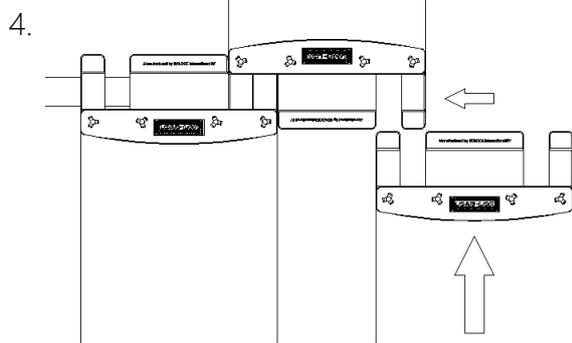

Mount all strips as shown in the figures.

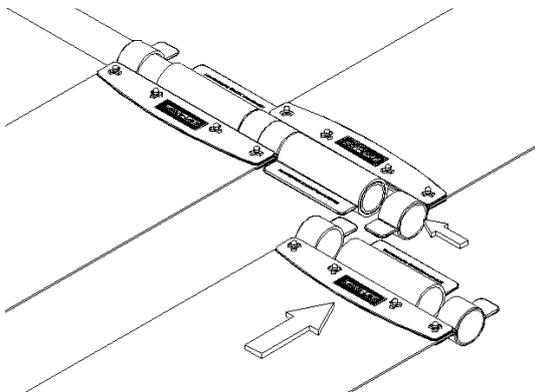

ATTENTION:

Keep the LoadLok / ISOLOCK logo on one side!

5. Slide the strip with the operating belt onto the tube.

6. Repeat above steps 3 till 5 for the other tube.

7. Mount the tube in the tube-profile

8.



The tubes **MUST** be mounted diametrically opposed as is shown in the figure.

9. Carefully lift the ISO Clear assembly against the opening of the mounted guide rails and insert the wheels of the trolleys into the rail.

10. Slide the ISOCLEAR assembly as far into the vehicle as possible so that the assembly cannot roll out of the **unsecured** rails.

11. Override the brake by pulling the break-cord on both sides.

12. Push the ISOCLEAR assembly at least so far in the trailer that the locking finger on each side is in a breakhole.



WARNING:

Severe injuries are possible due to a falling assembly.  
Assure that the locking finger is in a break hole!




ATTENTION:

The wheels are freely movable sideways up to 10mm to compensate for differences in vehicle width.

13 Mount the end stops at the bulkhead side of the track. (As is shown on position 14 or 15)

14


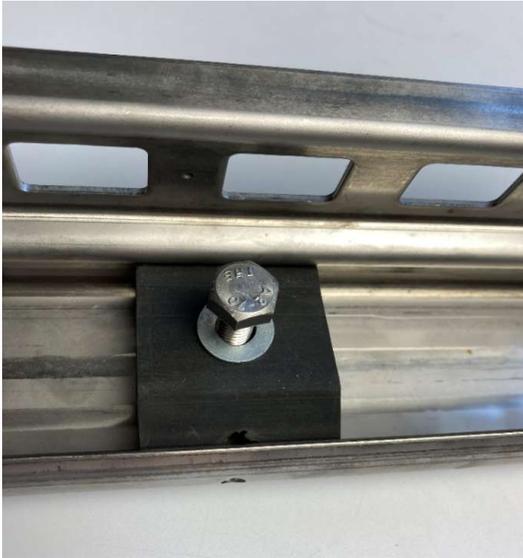


Mount / attach the end stop.

Possibilities are to use a M5 x 30 bolt and use the drain hole, a M8 bolt with thread or a big screw. Choose the option that suits your needs best. Mounting materials are not included.

15 Optional mounting of the steel stopper as shown in the figure. The hole in the Frigowall track must be drilled.

In total 3 holes must be drilled!

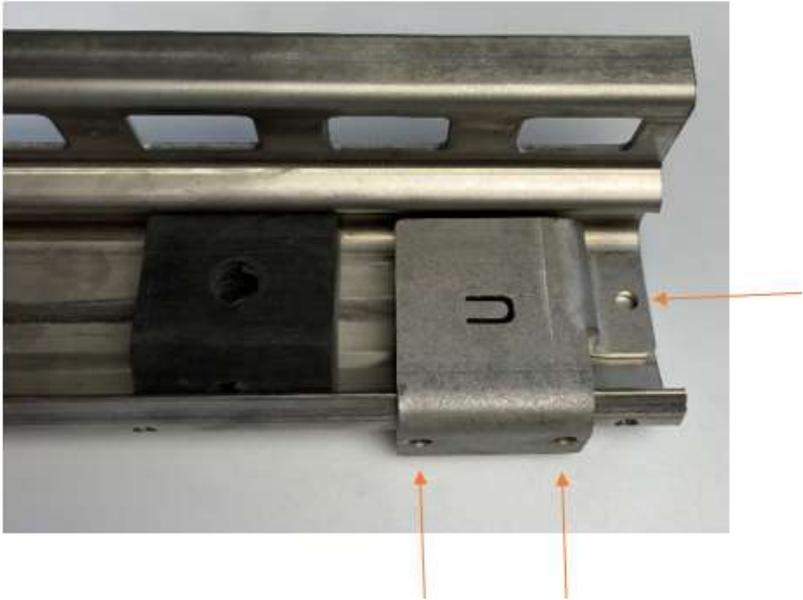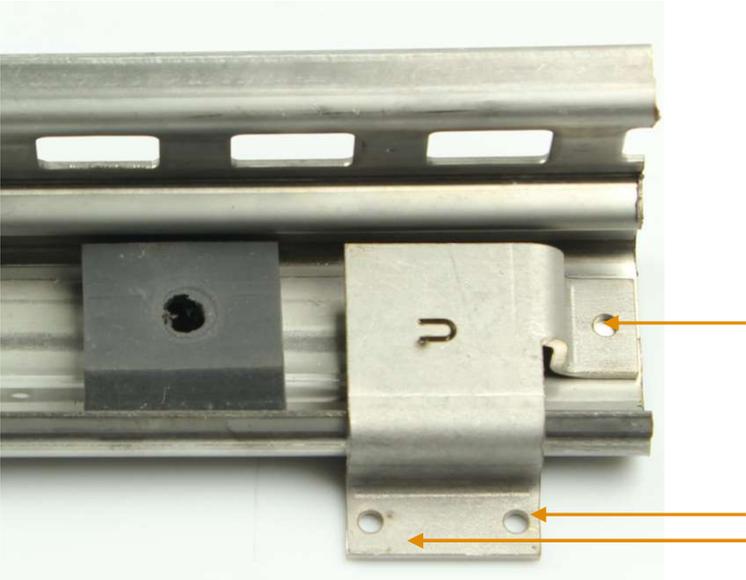

16



ATTENTION:  
Perform step 13 also for the other side of the trailer!


## 6.5 SIDE DOOR FIX VARIANT



WARNING:

Ensure that the vehicle is positioned on a horizontal plane before continuing with the installation!

1

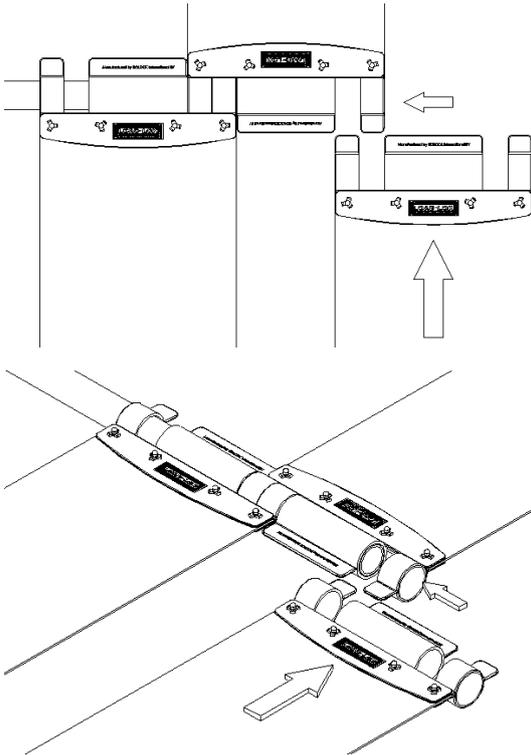

Mount all strips as shown in the figures.



ATTENTION:

Keep the LoadLok / ISOLOCK logo on one side!

2 The tube with the Isoclear sheets on it must be placed for the (side) door you want to close with the Isoclear.

- 3 Then slide the brackets on the tube in such way the Isoclear cannot shift sideways anymore.
- 4 Mount the brackets to the side wall.




- 5 Tighten the bolts in the brackets to keep the isoclear tube in fixed position.

 **ATTENTION:**  
To disassemble, follow these steps in reversed order

## 7 CHECK OF THE FUNCTIONALITY

### 7.1 CHECK THE BREAK FUNCTIONALITY

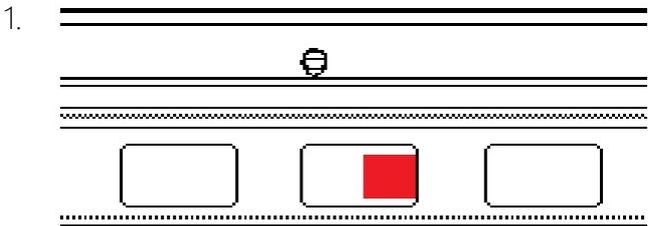

The break locks must be positioned in the middle of the breaking hole (as shown in red).



Correct position of the brake in the Frigowall track



Incorrect position of the brake in the Frigowall track

2. If this is not the case bend the break lock until it does!

3.



WARNING:  
Check both sides!



WARNING:  
If the functionality of the breaking locks cannot be assured:

- Contact Loadlok immediately!
- Do not release the vehicle until fault rectified!

## 8 MAINTENANCE

Maintenance table			
Manifestation of the failure	Possible cause or procedure to detect the failure	Solution	Performed by (unskilled till certified)
The sheets are worn out, broken or missing upon visual inspection		Replace sheets (art.nr. 11060166, as seen on page 8)	Mechanic
The brake fingers are not locking in the centre of the braking hole		Adjust the braking fingers according to paragraph "Check the brake functionality"	Mechanic

If the Isoclear is inspected on a regular basis on above mentioned inspection points the product lasts a vehicle lifetime.

## 9 DOCUMENT INFORMATION

Principal	Contractor	Digital file name
LoadLok International	Foxiz BV	Isoclear Mounting Instruction v1.1 March 2021

Remarks, corrections or suggestions are welcomed by the technical department.